



# Aviation Technical Bulletin

## Route to:

SERVICE  
MANAGER

SALES  
MANAGER

BULLETIN  
BOARD

*Bringing Power to Flight*

April 93

93-3

## CHAMPION CH34419 IGNITER



The CH34419 is a low voltage series igniter, used in General Electric CT-7/T-700 series engines. A semi-conductor material bridges the electrodes and is required for the proper function of the ignition. When servicing this type of igniter, care must be taken so as not to disturb the semi-conductor material.

### CLEANING

1. Wipe combustion deposits from exterior with a lint-free cloth.
2. DO NOT DISTURB THE COMBUSTION DEPOSITS IN THE GAP AREA.  
**NOTE:** If gap area deposits must be removed for a closer inspection, they may be removed by a wood scraper. DO NOT TOUCH SEMI-CONDUCTOR SURFACE DEPOSITS IN THE GAP AREA: THEY AID PLUG OPERATION.
3. Terminal well may be cleaned with a felt swab saturated in mineral spirits, methyl, or alcohol, using caution not to damage the terminal pin.

### INSPECTION

1. Visually check for mechanical damage. Reject if it shows impact damage, if connector well or firing end insulator is cracked or loose, or if connector pin is badly bent or broken.
2. Check firing end shell for chafing or fretting wear. This wear is not to exceed .015. If this wear is more than one-half the circumference of the shell, reject.
3. Reject if shell body is swollen or distorted.
4. Check igniter plug for electrical erosion. If erosion is equal to or exceeds this measurement, reject.  
SEE ILLUSTRATIONS:

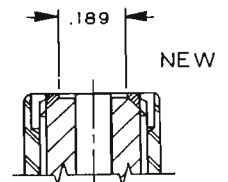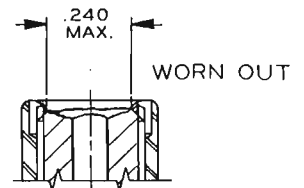

### TESTING:

1. Spark test. Test at normal open air pressure using the standard engine ignition unit, including shielded lead and terminal fittings.
2. Connect the ignition unit to the igniter.
3. Clamp the igniter with the firing end up.
4. Switch on the ignition unit. Wait 30 seconds. (If misfiring or irregularity in sparking occurs, discard the igniter).
5. Turn off the ignition unit.  
**WARNING:** THE OUTPUT OF THIS IGNITION SYSTEM IS SUFFICIENT TO CAUSE A LETHAL ELECTRICAL SHOCK. DO NOT TOUCH ANY EXPOSED OR LIVE PORTION. ALWAYS DISCONNECT LEADS FROM INPUT POWER SOURCE AND WAIT AT LEAST ONE MINUTE TO PERMIT STORED ENERGY TO DISSIPATE BEFORE WORKING WITH IGNITION UNIT.
6. Wait for at least one minute to elapse; disconnect the igniter from the ignition unit; unclamp the igniter.

**Champion Aviation Products: Your Blueprint for Performance**